Interface Leads

Made in Denmark by
Kram Telecom A/S

Interface Leads

Instruction for

Line-In kabel 68655 Ford
5000C, 6000CD ,7500DVD,
Sony Audio 3 (1xCD), Sony Audio 4 (6xCD) radioes

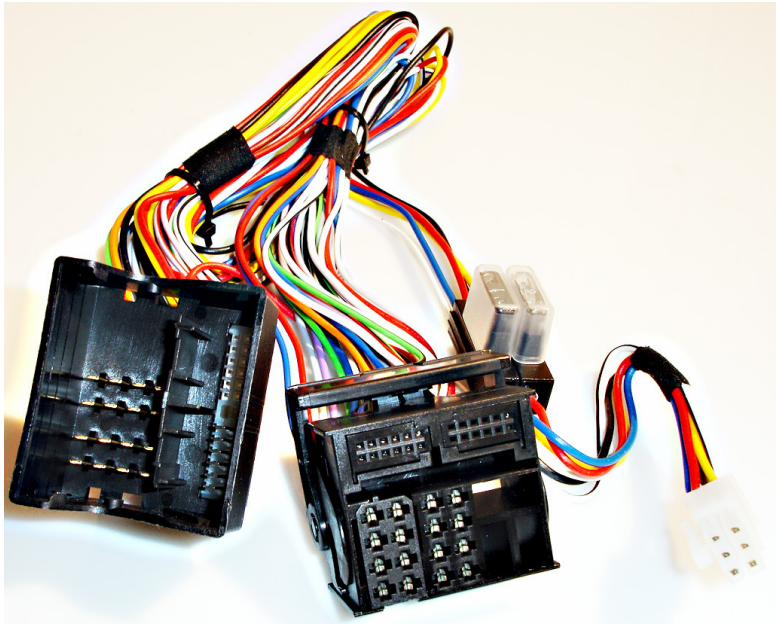

Made in Denmark by
Kram Telecom A/S

EN655

Interface Leads

Product description

Line-In kabel 68655 Ford
5000C, 6000CD ,7500DVD,
Sony Audio 3 (1xCD), Sony Audio 4 (6xCD) radioes

Interface Leads are used for car stereos with a Line-In function or VDA preparation. It enables the use of the car speakers when answering/making calls from your cell phone. Thereby using the radios build-in mute function.

Speaker-function: This is achieved by connecting the carkit directly to the cars Line-In input/VDA connector. By using the radios built-in relays the telephone conversation is send through the car speakers while the radio is muted. This way you will achieve a perfect hands free sound without interference from the car radio.

For a complete cable-set two item no. is required. The first is a car-specific Interface Lead. The second is a carkit-specific Interface adaptor cable .

Power supply of the carkit: All Interface Leads are delivered with a power connector for the carkit, that way you avoid cutting the cars wiring loom.

Please check the radio instruction manual for special issues regarding the connection and set-up of the radio, when connecting a carkit.

See our complete Interface program on
www.kram.dk

Interface Leads

Installation description

Line-In kabel 68655 Ford
5000C, 6000CD ,7500DVD,
Sony Audio 3 (1xCD), Sony Audio 4 (6xCD) radioes

Remove the radio, disconnect the Fakra connector from rear of the radio. Insert the Interface Lead between the radio and the removed Fakra connector. If there is a connector fittet to the Aux slot on the Fakra connector on the cars waringloom, this connector will have to be moved to the Fakra connector, connected to the radio.

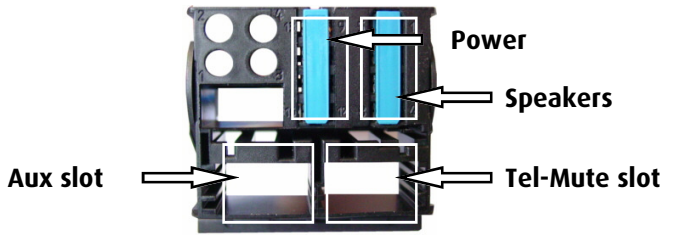

Front view of Fakra connector

When the Interface Lead is installed correctly it will redirect your call through the car front speaker.

Remember to use a carkit Interface adaptor to connect the carkit to the Line-In cable.

Note: Some car models do not have an ignition wire in the Fakra connector on the cars wiring loom. Therefore the blue ignition wire can be connected to red constant wire with the help of the bullit connector on the cable set. But for some carkits (Bluetooth) it is necessary to connect the ignition wire to the real ignition wire, witch is often found in the cars fusebox.